




REGULAR DISPLAY AND BUTTON OPERATION E-01

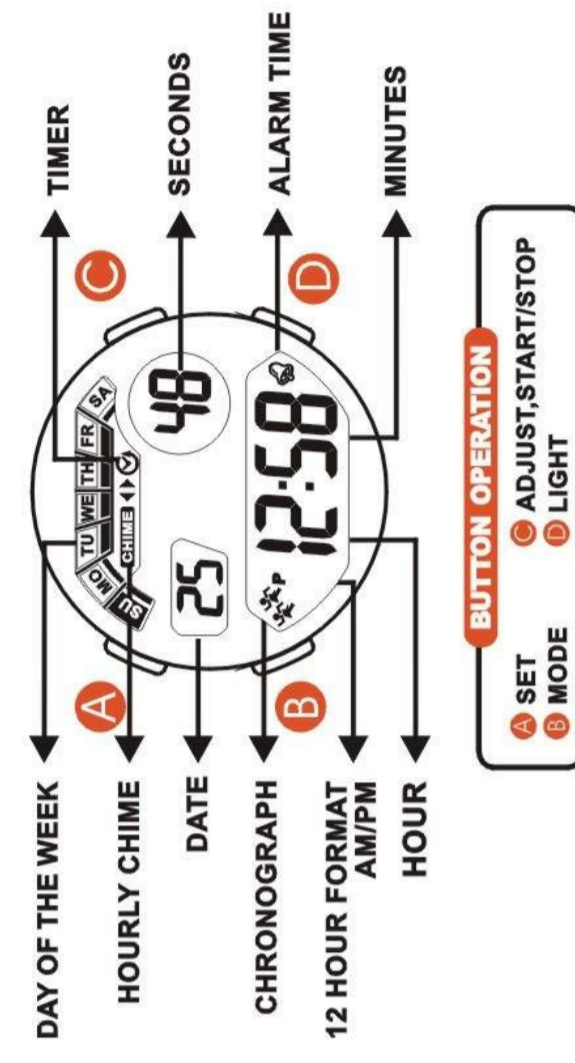


HOW TO CHANGE THE DISPLAY MODE E-02

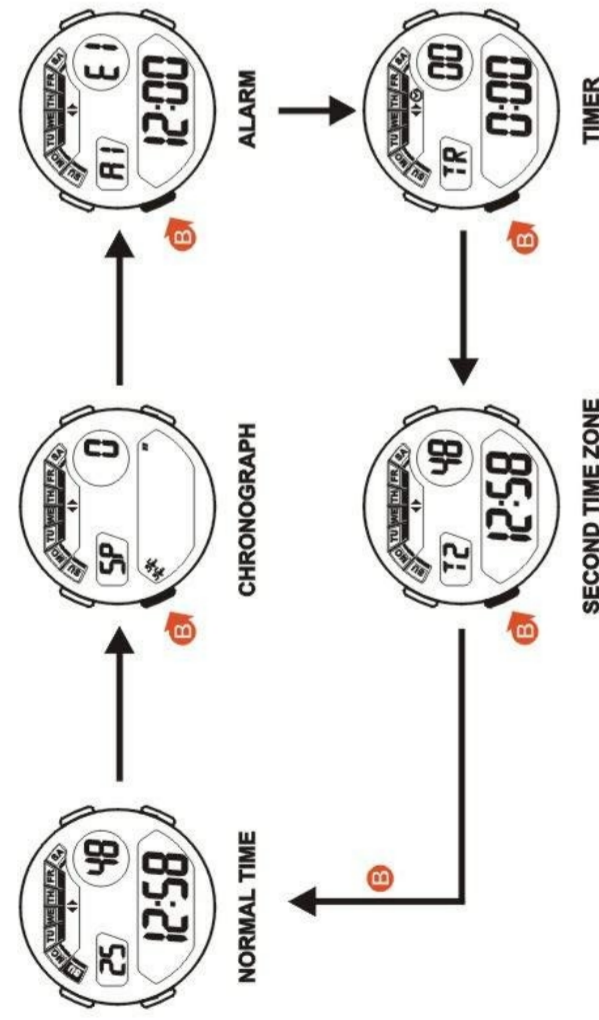


HOW TO DISPLAY CALENDAR E-03

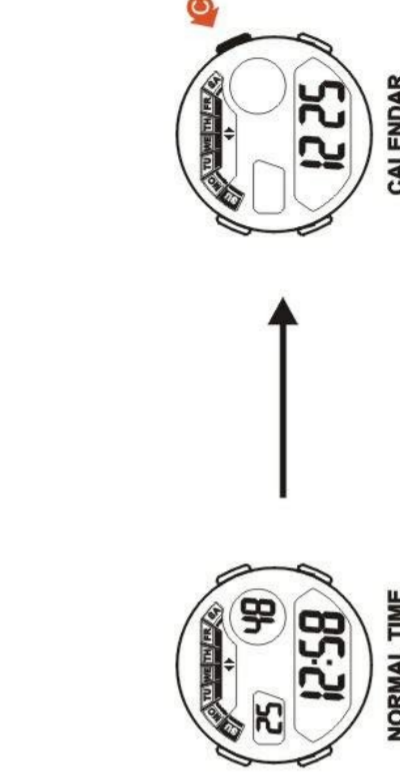


HOW TO SET NORMAL TIME E-04

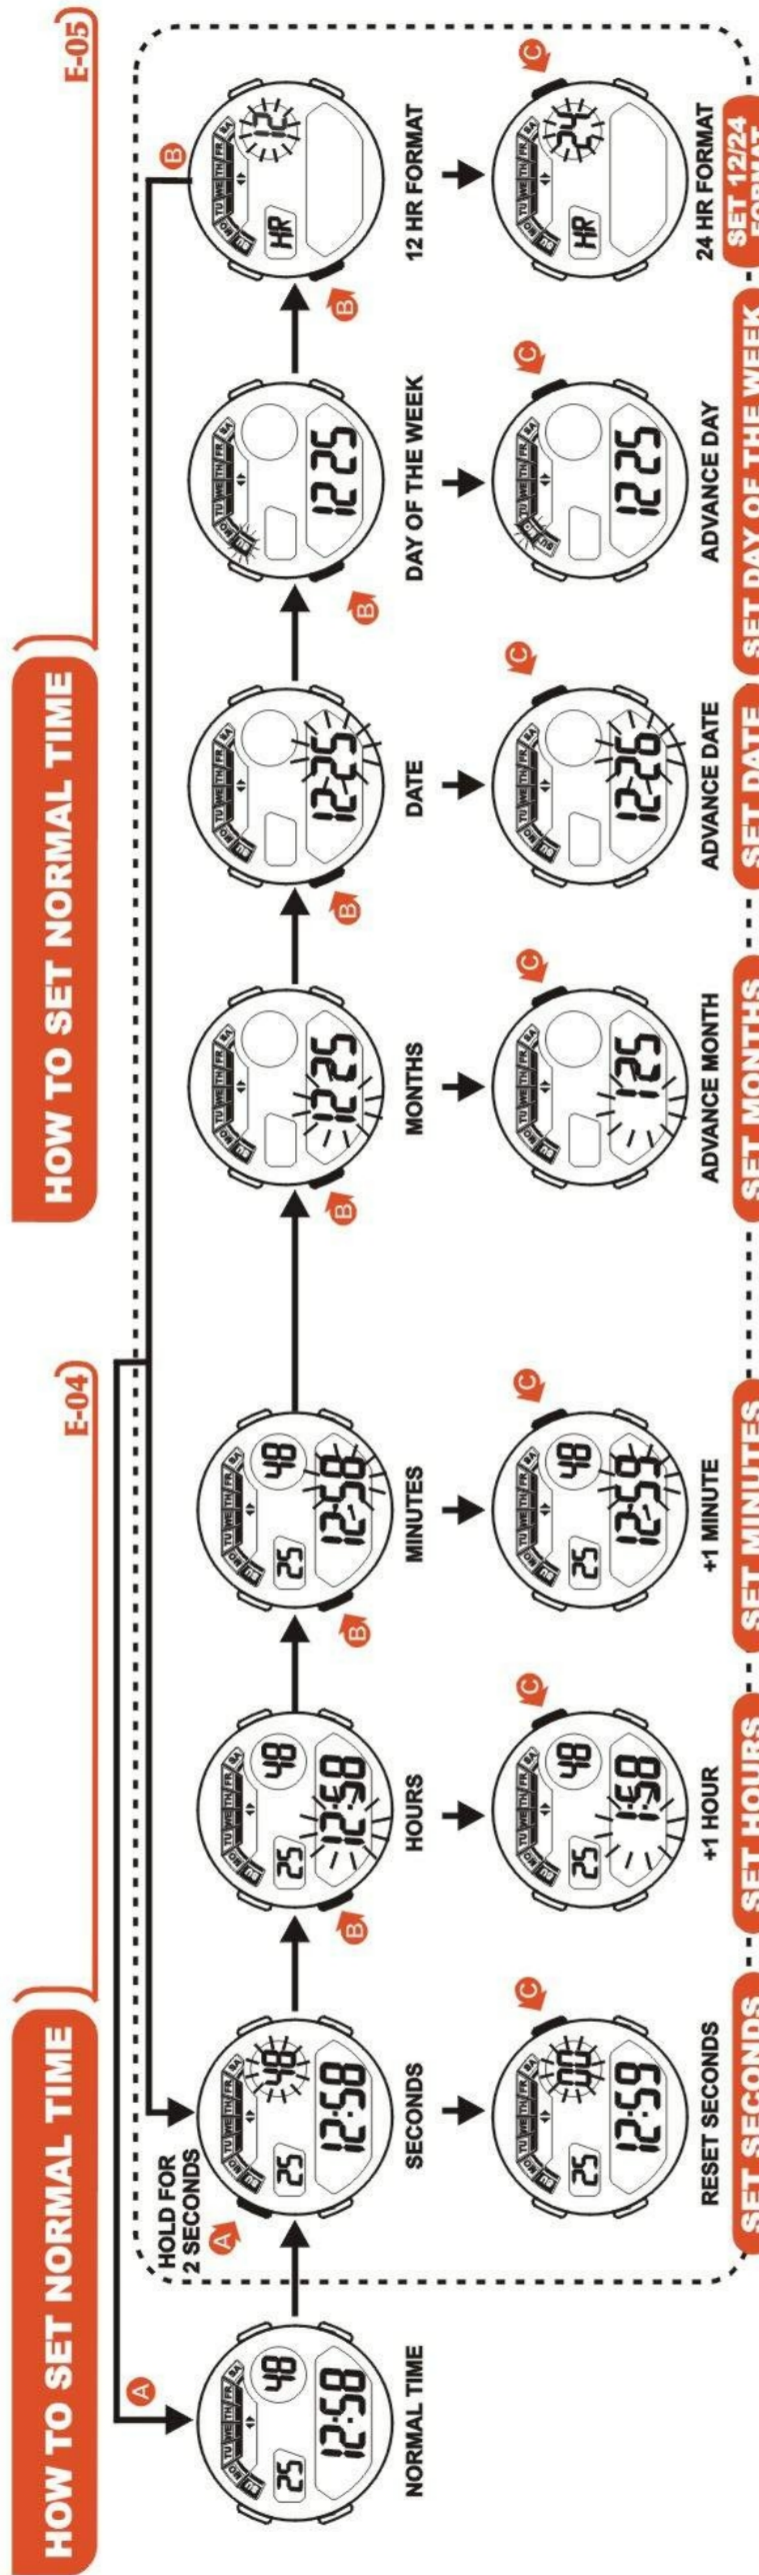


HOW TO SET ALARM TIME E-05

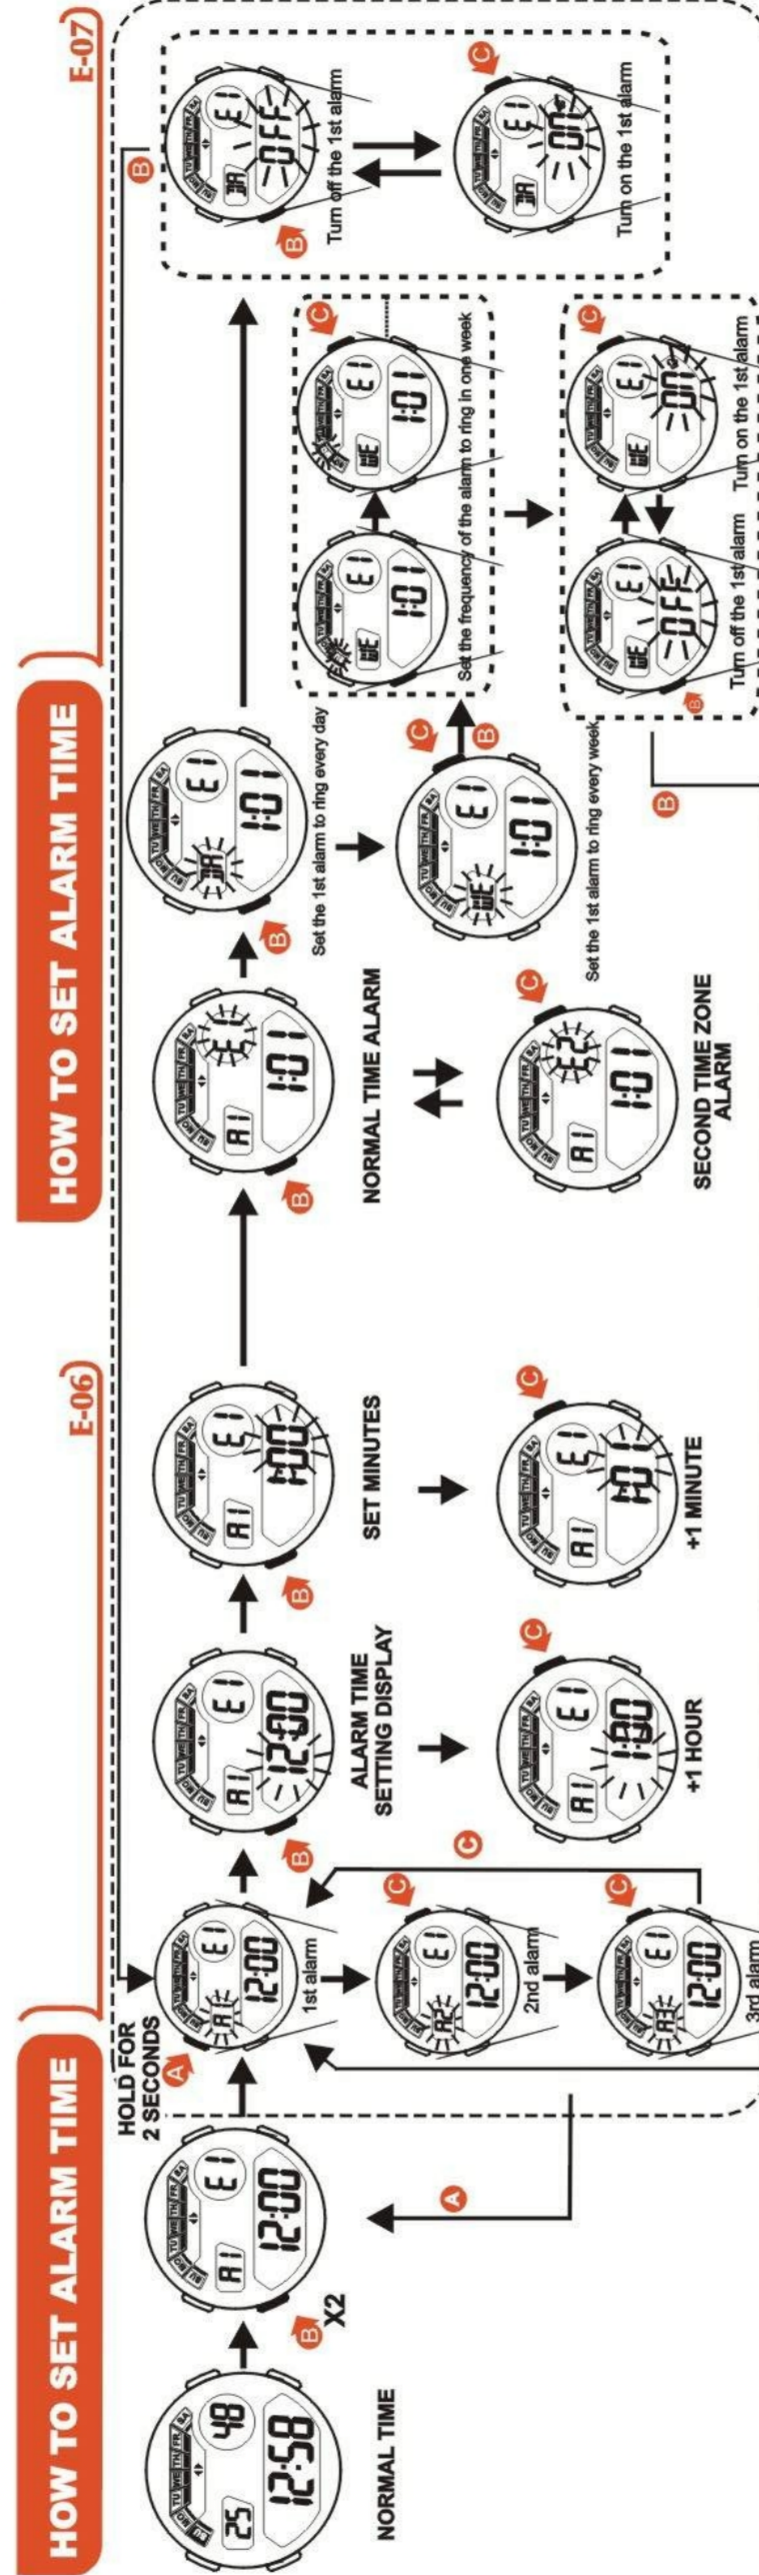


How to set the alarm, ringing on the hour and key tone E-06

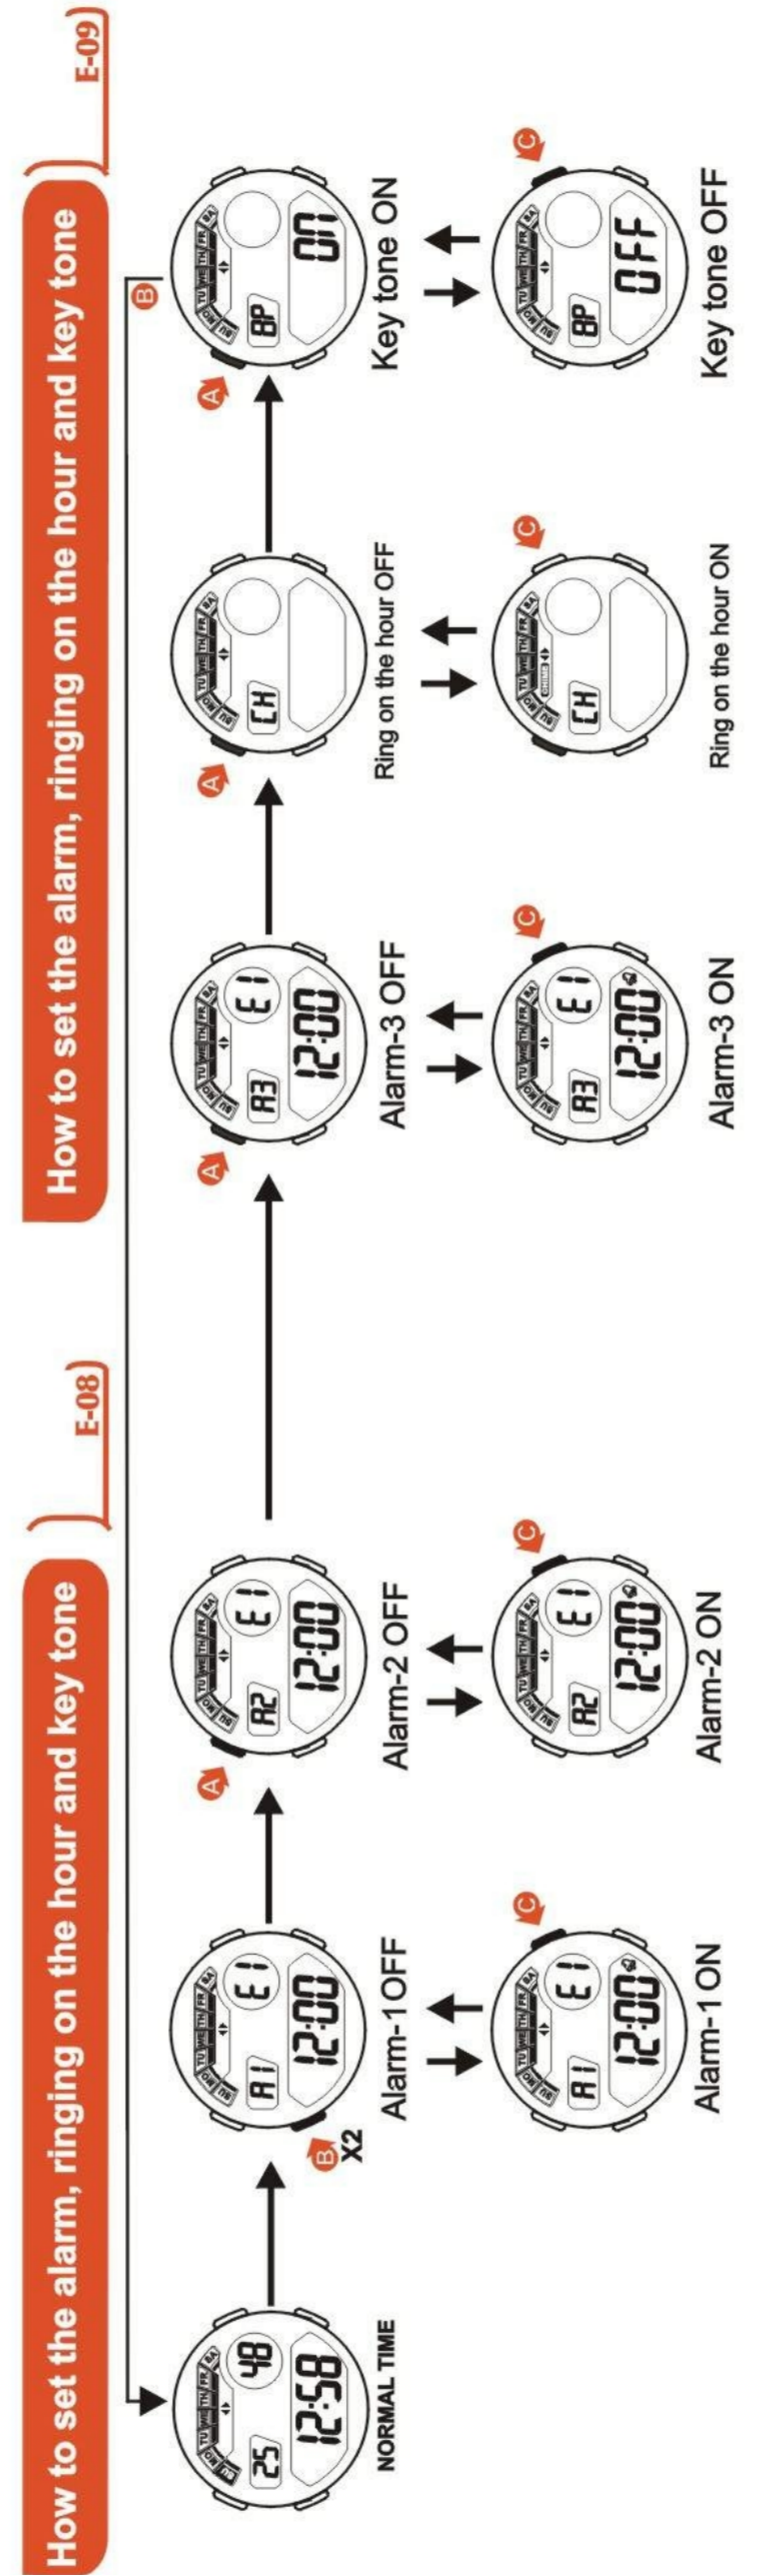


HOW TO USE THE CHRONOGRAPH E-07

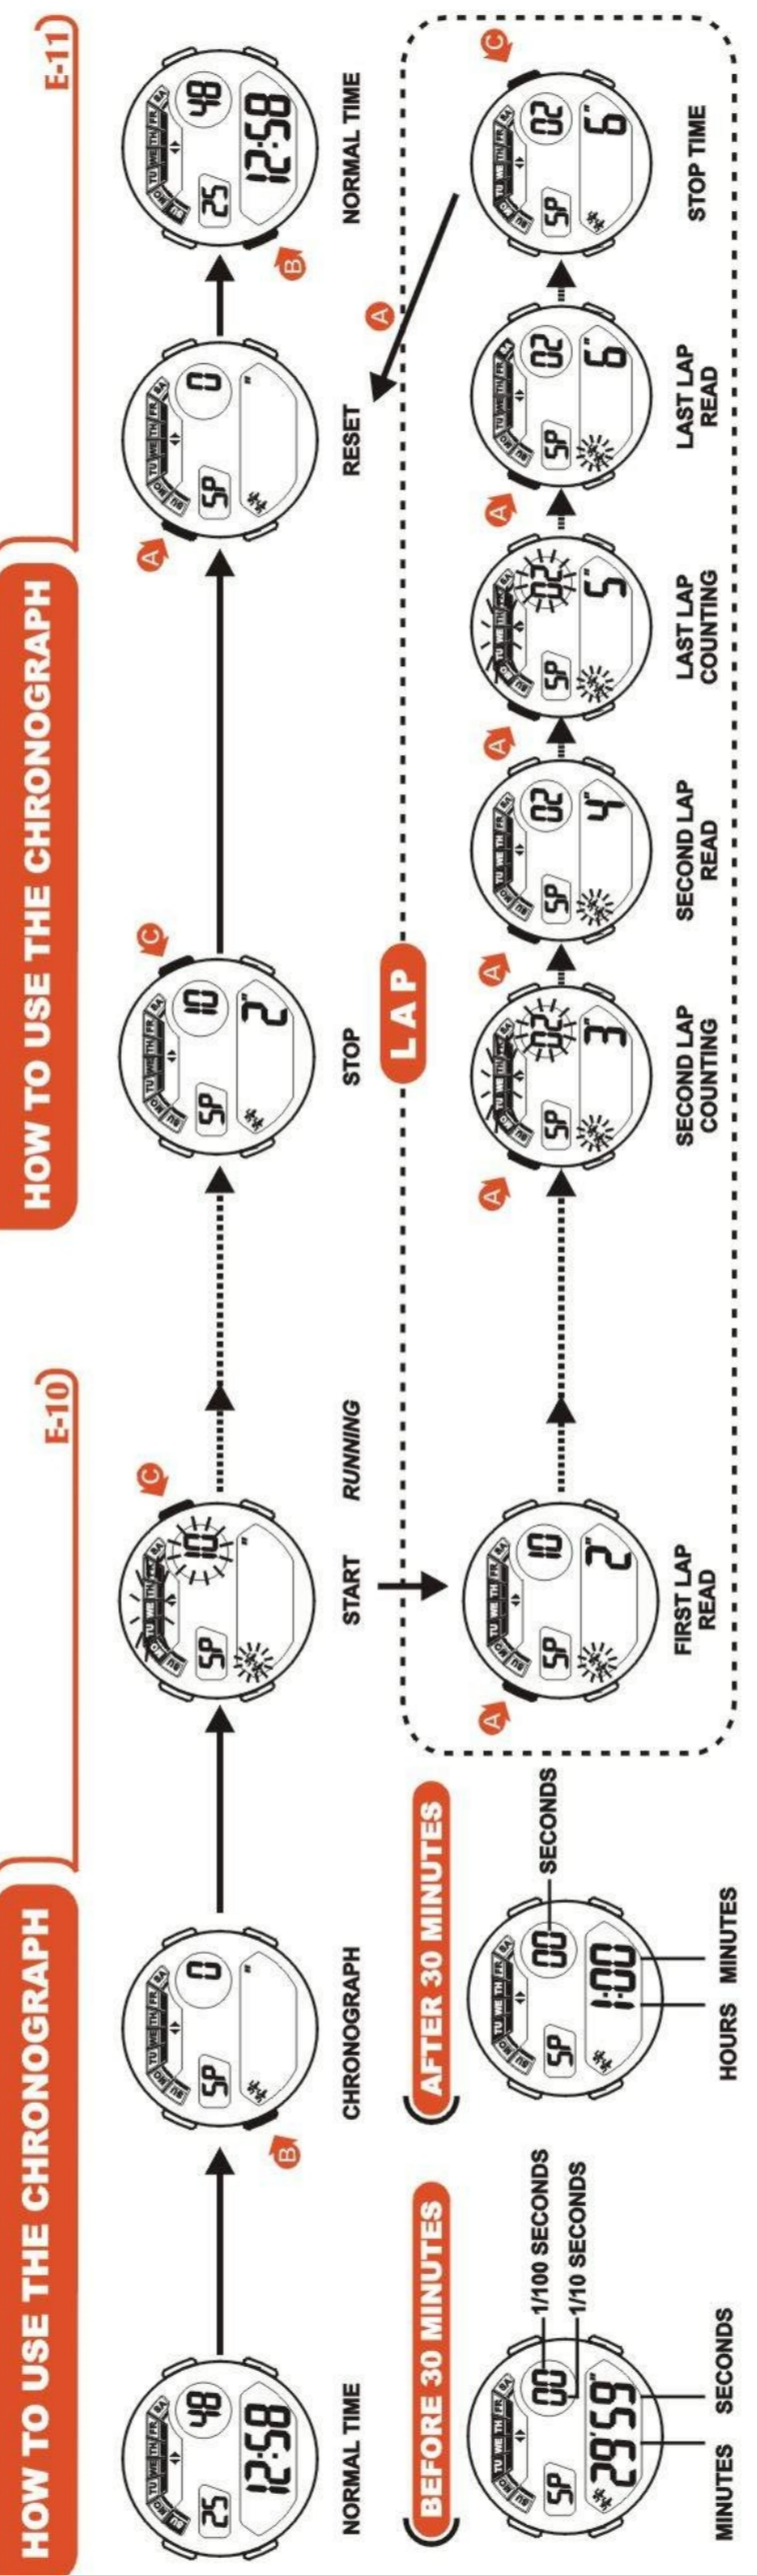

HOW TO USE TIMER E-08

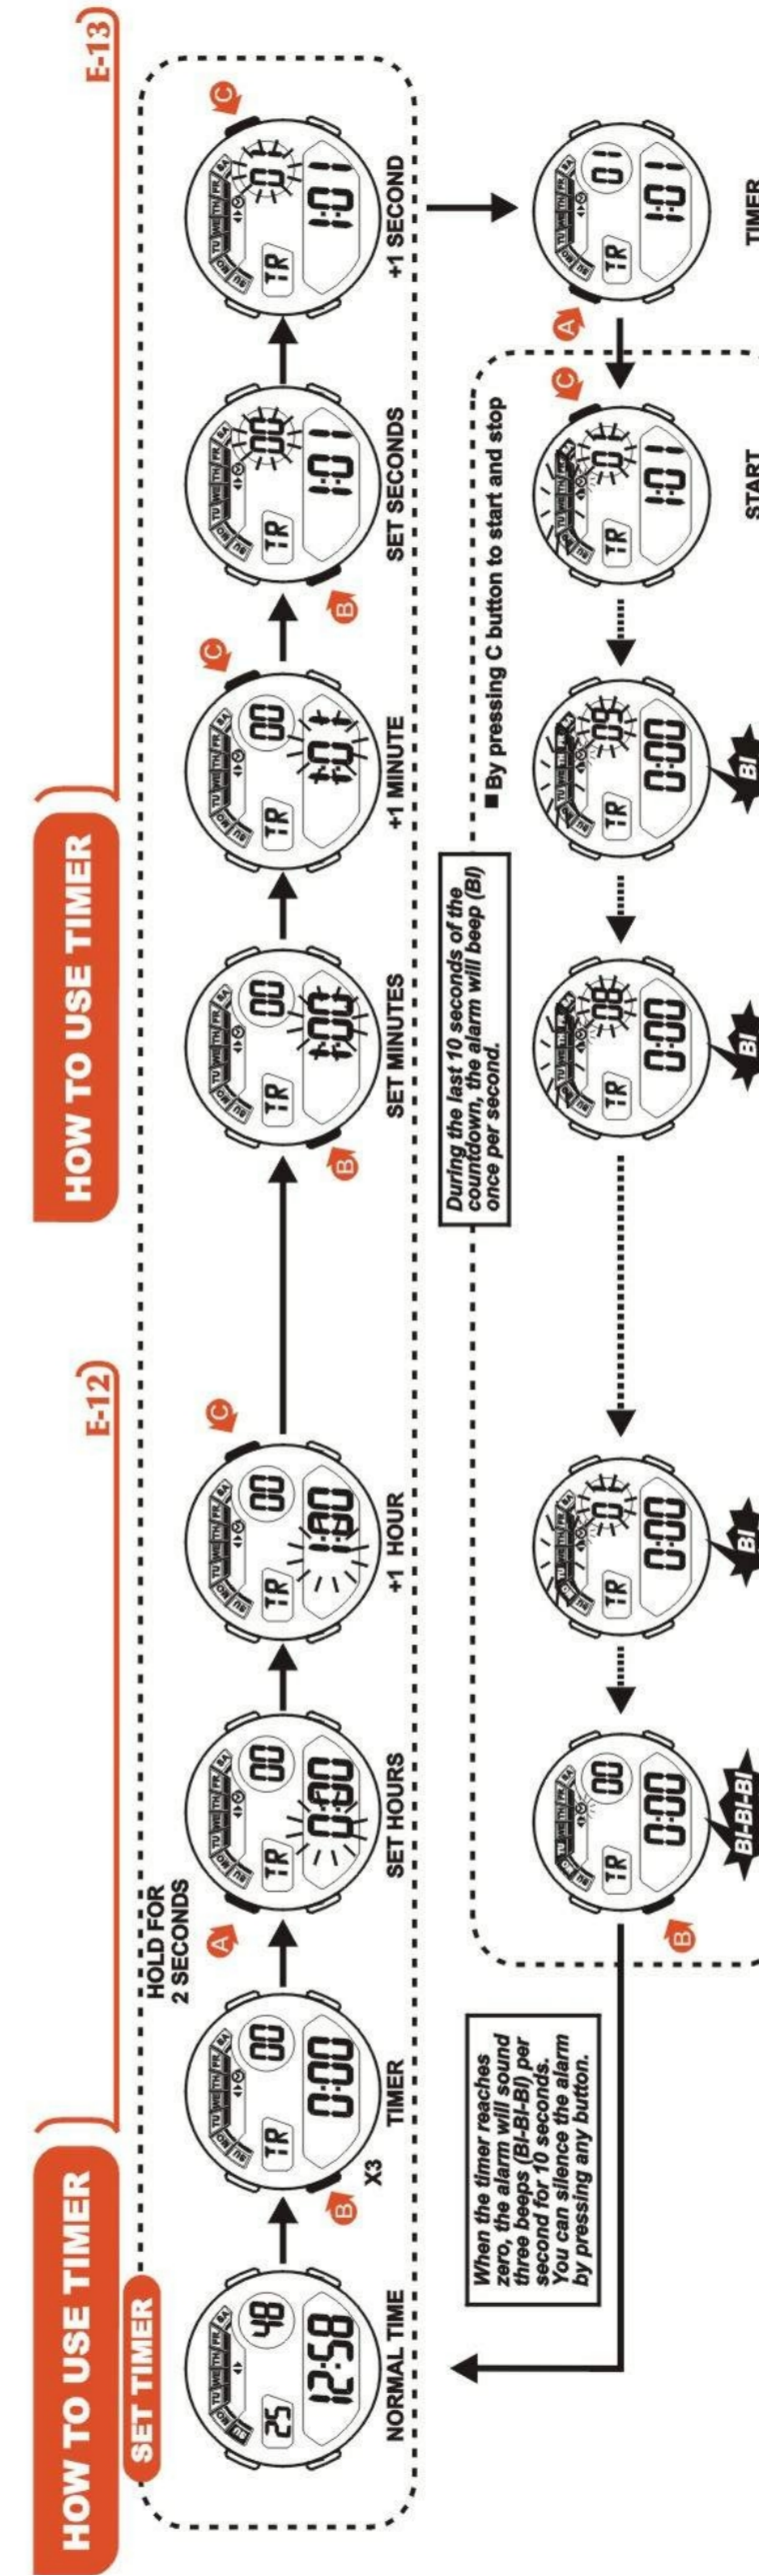

HOW TO SET SECOND TIME ZONE E-09

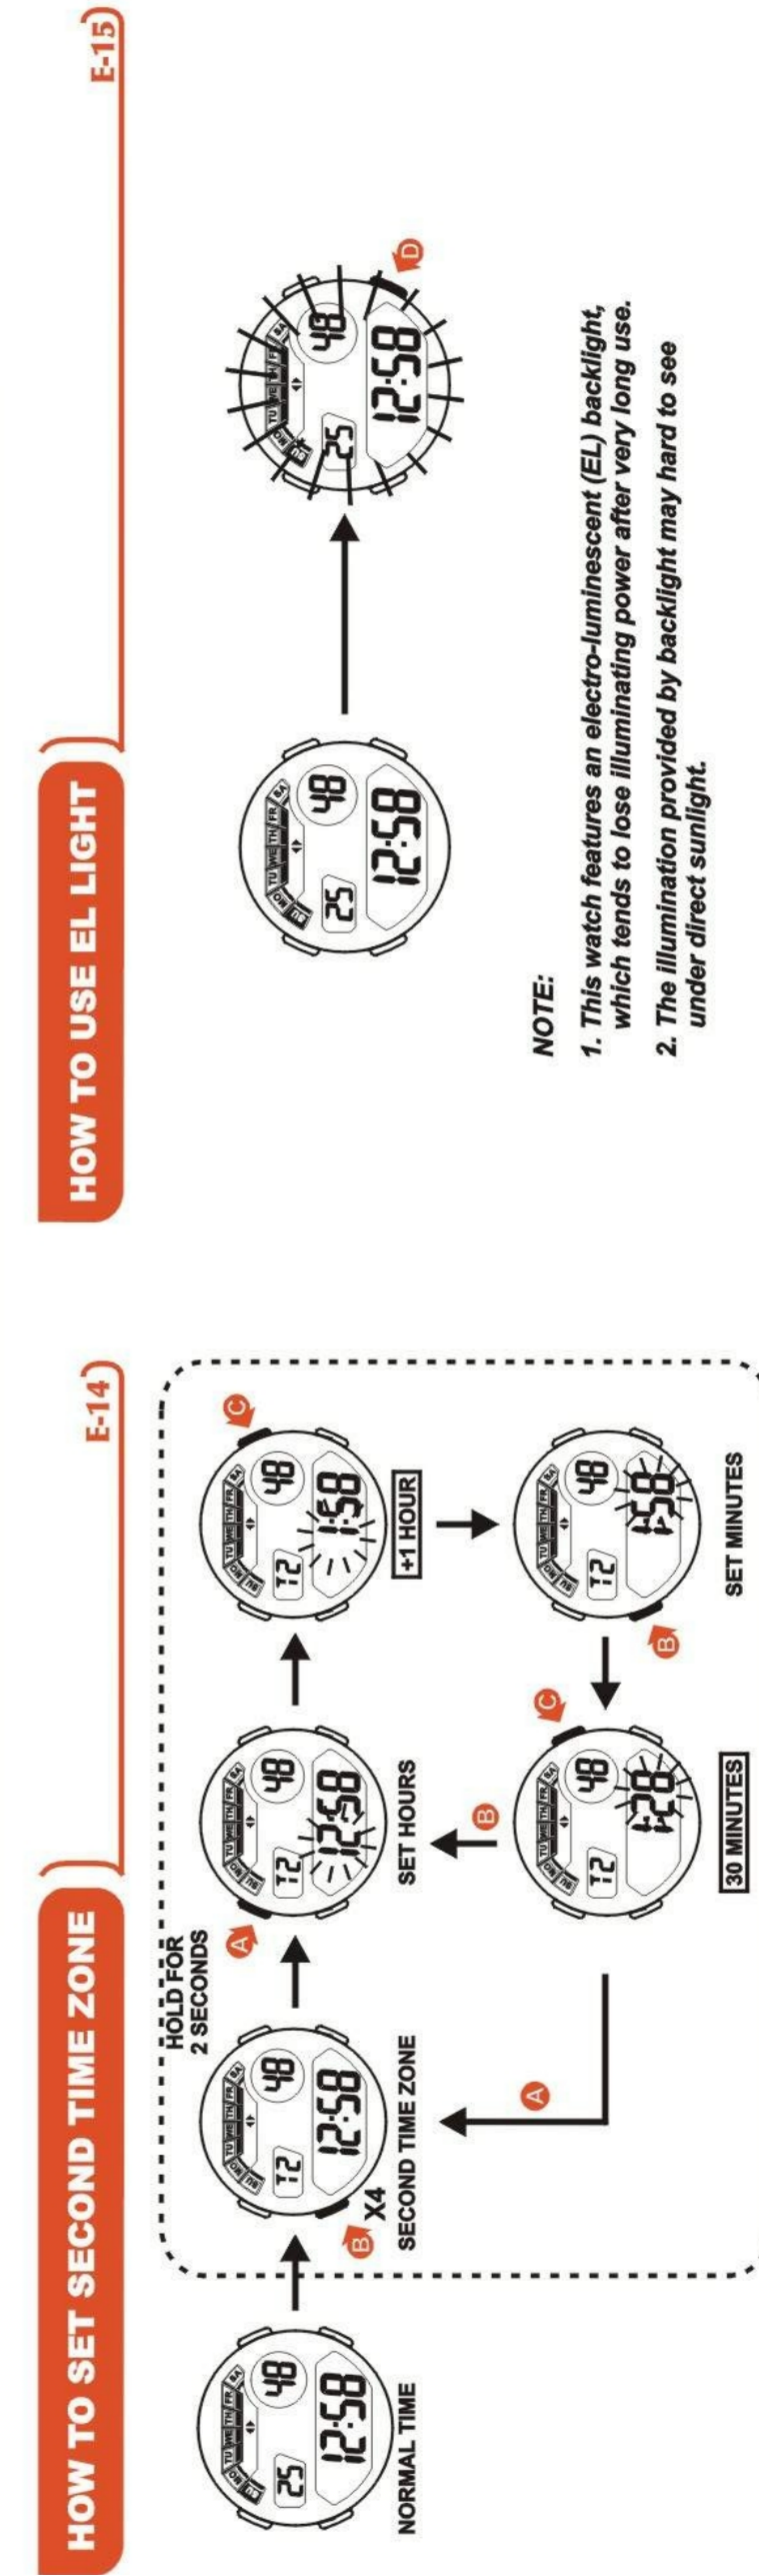

CARE OF YOUR WATCH E-10

- This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
- Do not operate buttons while underwater, or while swimming or diving.
- Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
- Avoid severe impact: The watch is designed to withstand impact under normal use. Do not subject it to severe impacts or rough usage, and do not drop it onto hard surfaces.
- Avoid exposing the watch to temperature extremes.
- Clean the watch with a soft cloth and clean water only. Avoid using chemicals, especially soap.
- Keep your watch away from strong electric fields and static electricity.

FEATURES AND SPECIFICATIONS E-11

- Standard display mode: Hour, Minutes, Seconds, Month, Day of the week.
- Function:
 - * Month, Date AM/PM and Electro-Luminescent light.
 - * Alarm function with buzzer signal output.
 - * Chronograph function with lap operation.
 - * Hourly chime.
 - * 12/24 hour format switch option.
 - * Timer.
 - * Second time zone.
- Accuracy at normal temperature (25°C): ±30 seconds a month.
- Normal operating temperature range: 10°C ~ 40°C.

GUARANTEE CERTIFICATE
CERTIFICAT DE GARANTIE

MODEL: _____
 MODELE: _____
 DATE OF PURCHASE: _____
 DATE D'ACHAT: _____
 OFFICE DEALER STAMP:
 TAMPON DU DETAILLANT OFFICIEL: _____