




HOW TO CHANGE THE DISPLAY MODE

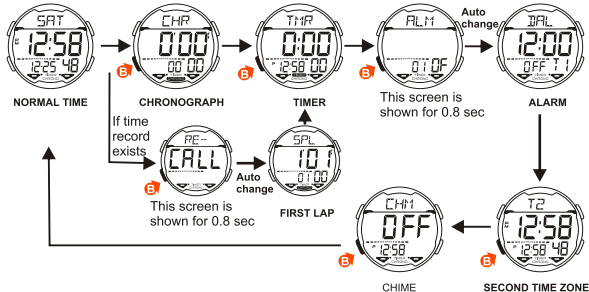


HOW TO DISPLAY CALENDAR

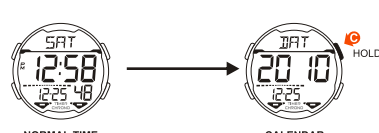


HOW TO SET NORMAL TIME

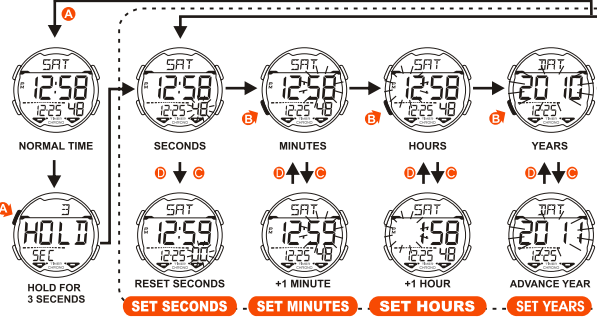


HOW TO SET NORMAL TIME

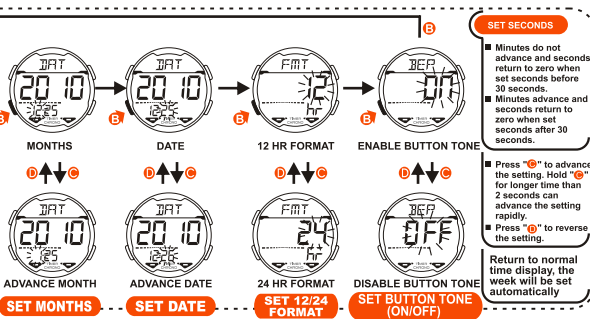


HOW TO USE THE CHRONOGRAPH

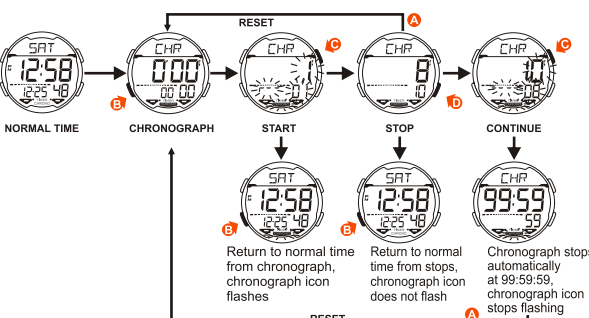


HOW TO CHANGE THE LAP/SPLIT MODE

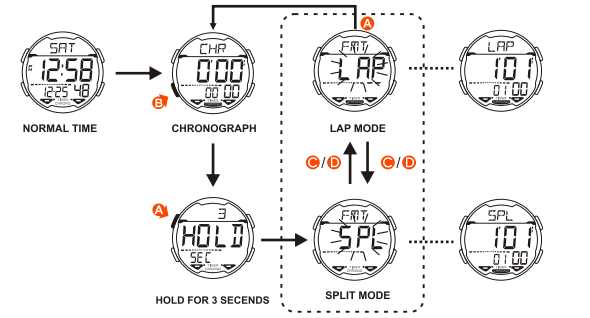


HOW TO SET THE SPLIT OR LAP OPERATION

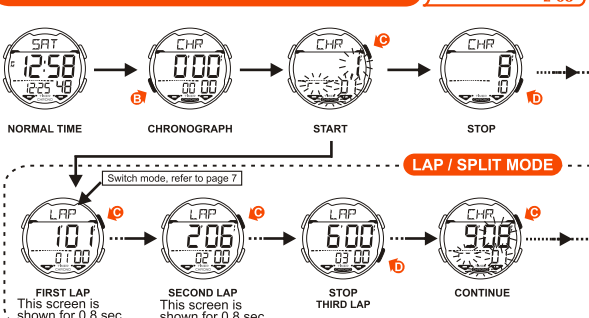


HOW TO SET THE SPLIT OR LAP OPERATION

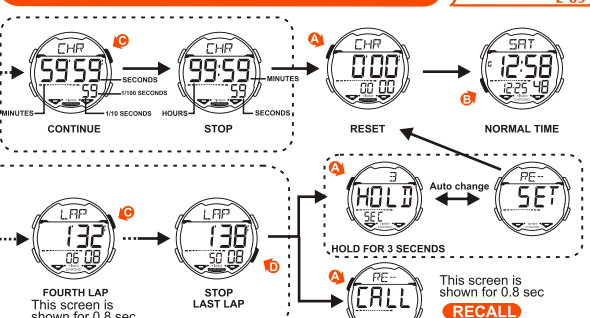


HOW TO USE THE RECALL

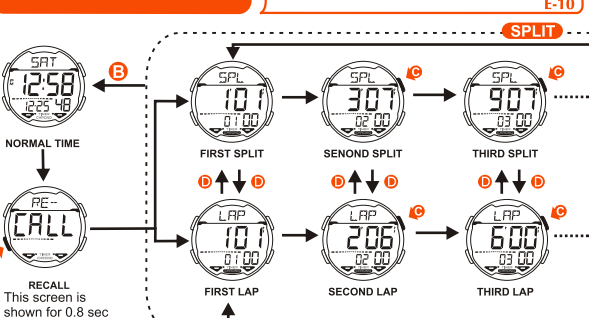


HOW TO USE THE RECALL

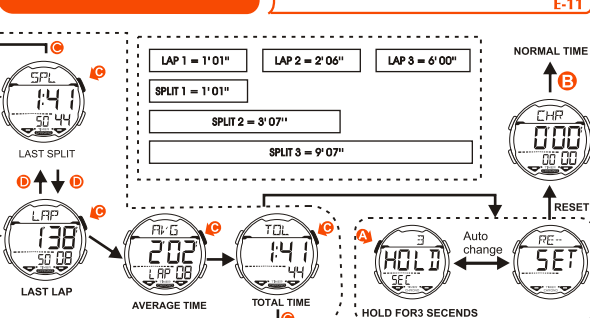


HOW TO USE TIMER

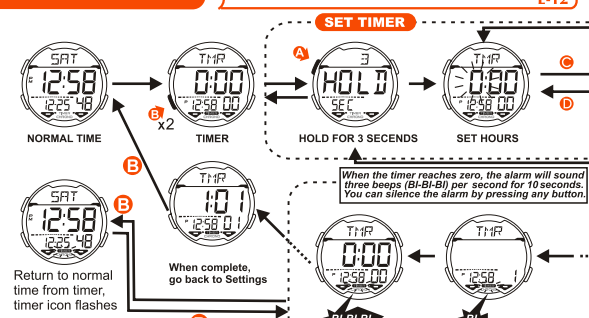


HOW TO USE TIMER

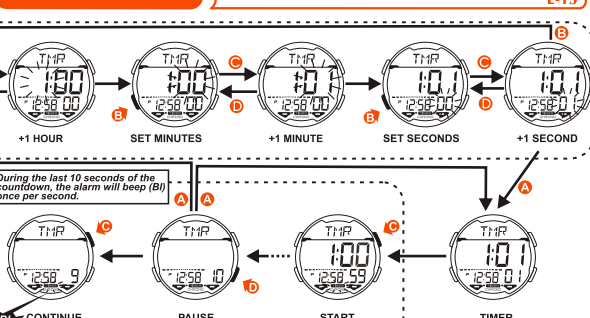


HOW TO SET DAILY ALARM TIME

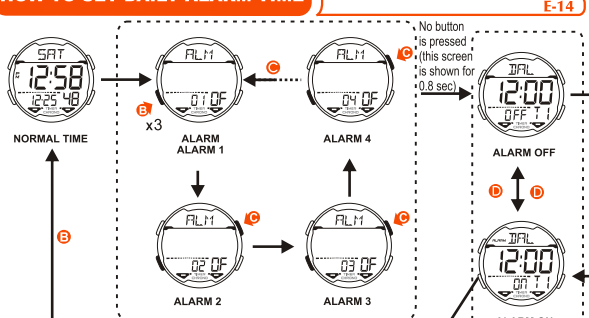


HOW TO SET DAILY ALARM TIME

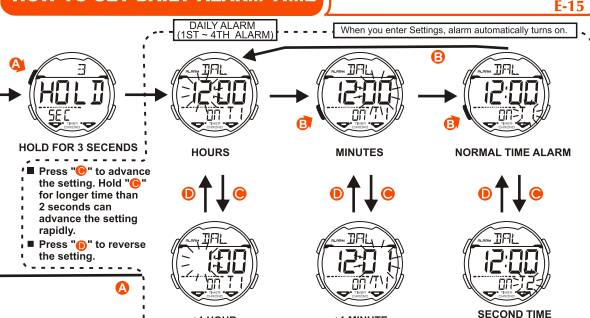


HOW TO SET DATE ALARM TIME

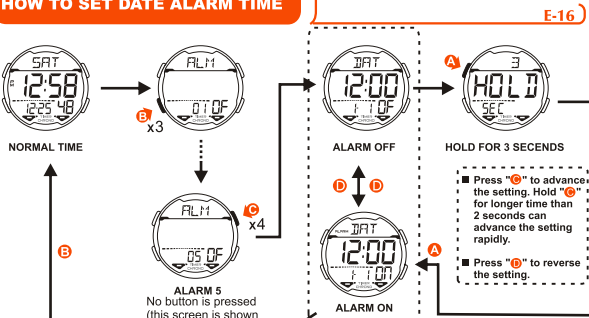


HOW TO SET DATE ALARM TIME

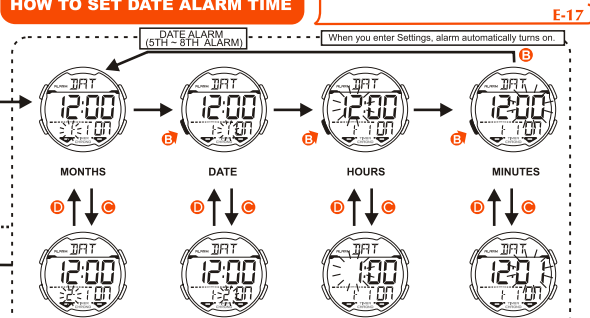


HOW TO SET SECOND TIME ZONE

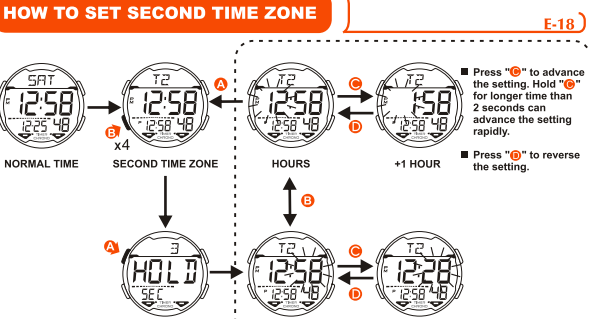

HOW TO SETUP HOURLY CHIME ON/OFF

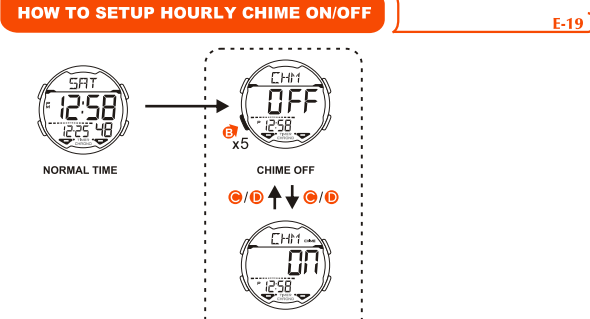

HOW TO USE EL LIGHT

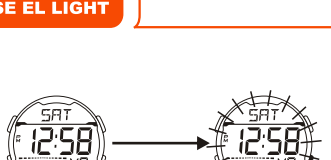

NOTE:

- This watch features an electro-luminescent (EL) backlight, which tends to lose illuminating power after very long use.
- The illumination provided by backlight may hard to see under direct sunlight.

SOUND

- 1.Button tone: Turn ON or OFF, see "How to set function display."
- 2.Beeps with each press of a button except for the LIGHT button.
- 3.The button will only beep once when pressed and held
- 4.Alarm duration: 20 sec, two short beeps per second,beep once every hour.
- 5.The TIMER sound will take priority over the ALARM sound

CARE OF YOUR WATCH

1. This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
2. Do not operate buttons underwater, or while swimming or diving.
3. Should water or condensation appear in the watch, immediately have the watch checked. Water can corrupt electronic parts inside the case.
4. Avoid severe impact: The watch is designed to withstand impact under normal use. Do not subject it to severe impacts or rough usage, and do not drop it onto hard surfaces.
5. Avoid excessive temperature extremes.
6. Clean the watch with a soft cloth and clean water. Avoid using cleaners, especially soap.
7. Keep your watch away from strong electric fields and static electricity.

FEATURES AND SPECIFICATIONS

1. Standard display mode: Hour, Minutes, Seconds, Day / of the week, Month, Date.
2. Function:
 - * 100-hour chronograph with memory for 50 laps / splits, and average lap.
 - * 24-hour countdown timer.
 - * 8 alarm (4 daily / 4 date) function with buzzer signal output.
 - * 2 second zone.
 - * Hourly chime.
 - * Perpetual calendar.
 - * 12/24 hour format switch option.
 - * AM / PM & Electro-Luminescent light.
 - * Button tone ON/OFF function
3. Accuracy at normal temperature (25°C): ± 30 seconds a month.
4. Normal operating temperature range: 10°C ~ 40°C.

GUARANTEE CERTIFICATE
CERTIFICAT DE GARANTIE

MODEL: _____
 MODEL: _____

DATE OF PURCHASE: _____
 DATE D'ACHAT: _____

OFFICE DEALER STAMP:
 TAMPON DU DETAILLANT OFFICIEL: